


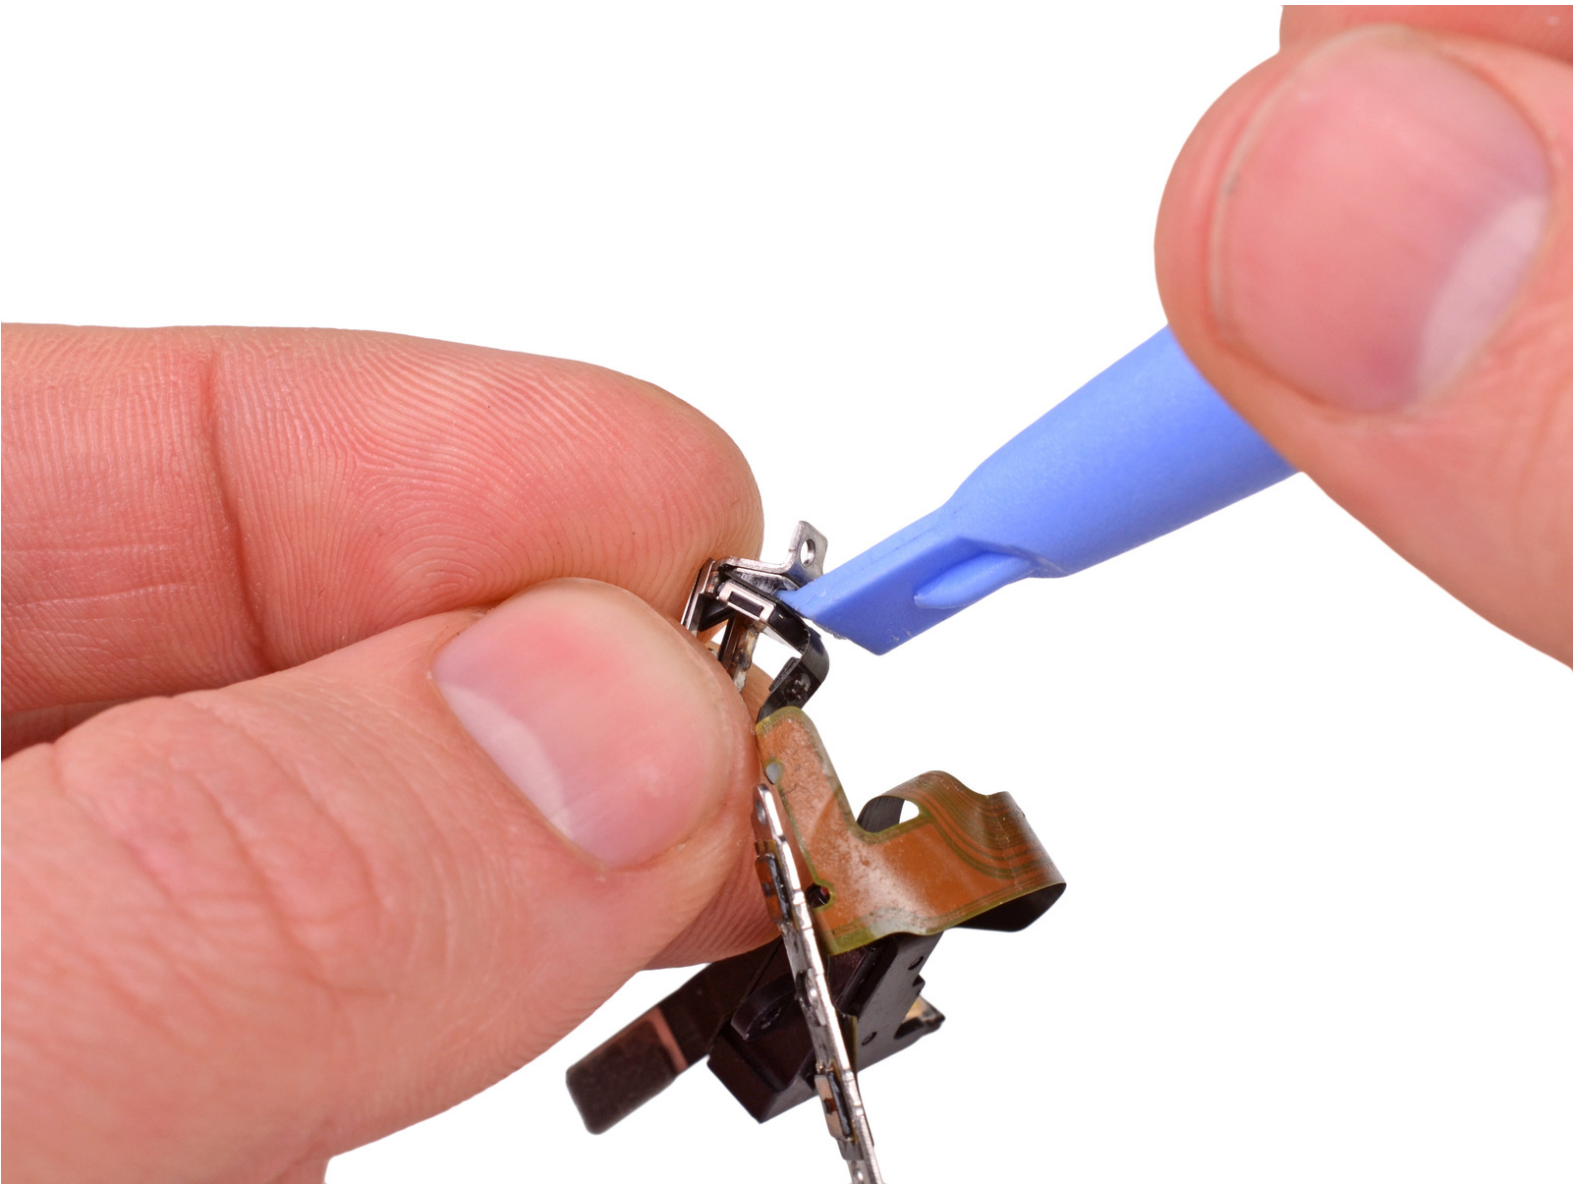

iPhone 4S Headphone Jack Cable Replacement

Replace a broken headphone jack cable that contains the upper microphone as well as the electronic portions of the volume buttons and silent switch on your iPhone 4S.

Written By: Walter Galan



INTRODUCTION

Use this guide to replace the headphone jack cable which also contains the upper microphone and electronic portions of the volume buttons and silent switch.



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [2.5 mm Flathead Screwdriver](#) (1)
- [Tweezers](#) (1)






PARTS:

- [iPhone 4S Headphone Jack & Volume Control Cable](#) (1)

Step 1 — Rear Panel



-  Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.
- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm Pentalobe P2 screws next to the dock connector.
-  Be sure the driver is well seated when removing Pentalobe screws, they are very easy to strip.
-  During reassembly, we recommend you replace the 5-point screws with equivalent Phillips screws. Our [Liberation Kit](#) provides the tools and screws needed to replace the Pentalobe screws with Phillips screws.

Step 2



- Push the rear panel toward the top edge of the iPhone.

i The panel will move about 2 mm.

Step 3



- Pull the rear panel away from the back of the iPhone, being careful not to damage the plastic clips attached to the rear panel.
- Remove the rear panel from the iPhone.

Step 4 — Battery




- Remove the following screws securing the battery connector to the logic board:
 - One 1.7 mm Phillips screw
 - One 1.5 mm Phillips screw.
- Use a plastic opening tool to gently detach the battery connector from the socket on the device. Start lifting off the connector from the bottom side, by placing the tip of the tool between the loudspeaker enclosure and the metal cover of the connector.
- ⓘ The battery connector comes off vertically from the logic board. Do not apply force sideways.
- ⚠ Pay attention to the pressure contact underneath the top screw of the battery connector. This may come loose while prying the battery connector from its socket.

Step 5



- Use a plastic opening tool to pull the pressure contact from underneath the battery connector.
- ⚠ When reinstalling the pressure contact, be sure to clean it with a degreaser such as windex or isopropyl alcohol. The oils on your fingers have the potential to create wireless interference.
- ⚠ Take notice of the position of the small black ground clip on the upper screw of the battery connector. This clip is attached only by the upper screw. When reinstalling, it must be aligned so the gold contact point will press against the back cover.
- Be careful not to rip off the battery connector socket soldered on the logic board. There are 4 very small soldering points awaiting this mistake!

Step 6

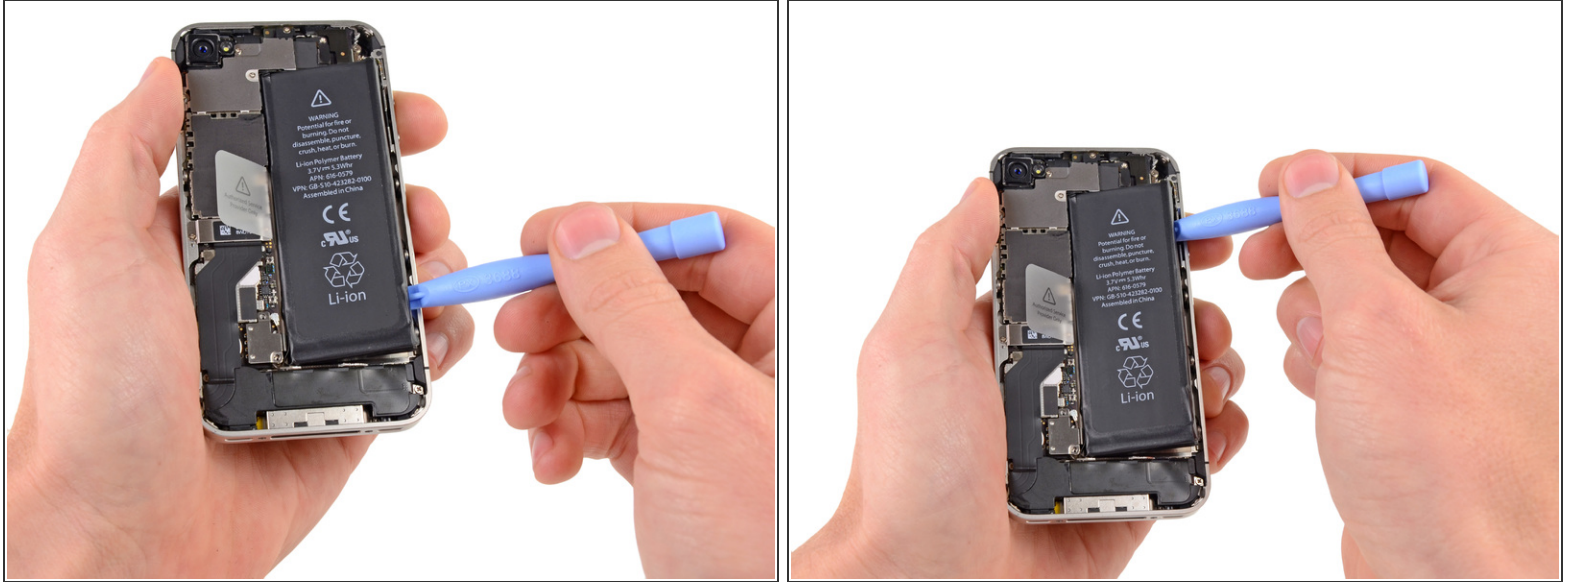


- Insert the edge of a plastic opening tool between the battery and the outer case near the bottom of the iPhone.
- Run the plastic opening tool along the right edge of the battery and pry up at several points to completely separate it from the adhesive securing it to the outer case.


Step 7




- Use the exposed clear plastic pull tab to peel the battery off the adhesive securing it to the iPhone.

 Be careful not to pull the plastic pull tab too hard as it can be ripped off very easily.

- Remove the battery.


 Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.

Step 8 — Dock Connector Cable

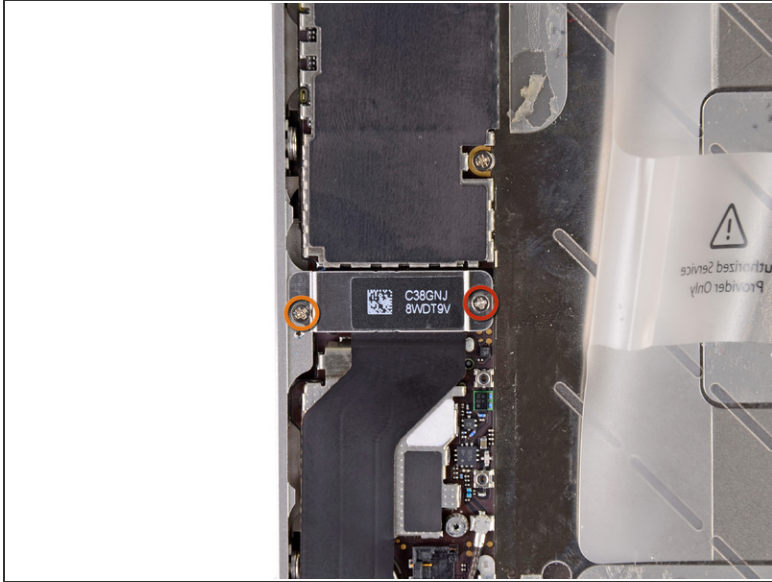


- Remove the following screws securing the dock connector cable cover to the logic board:
 - One 1.5 mm Phillips screw
 - One 1.2 mm Phillips screw
- Remove the metal dock connector cable cover.

Step 9

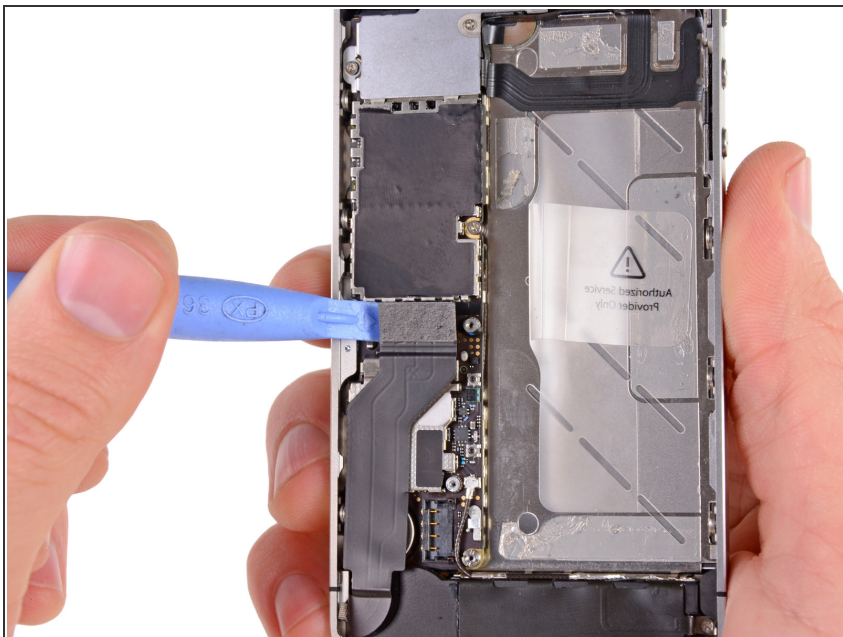

- Use the edge of a plastic opening tool to pry the dock cable up from its socket on the logic board.

Step 10

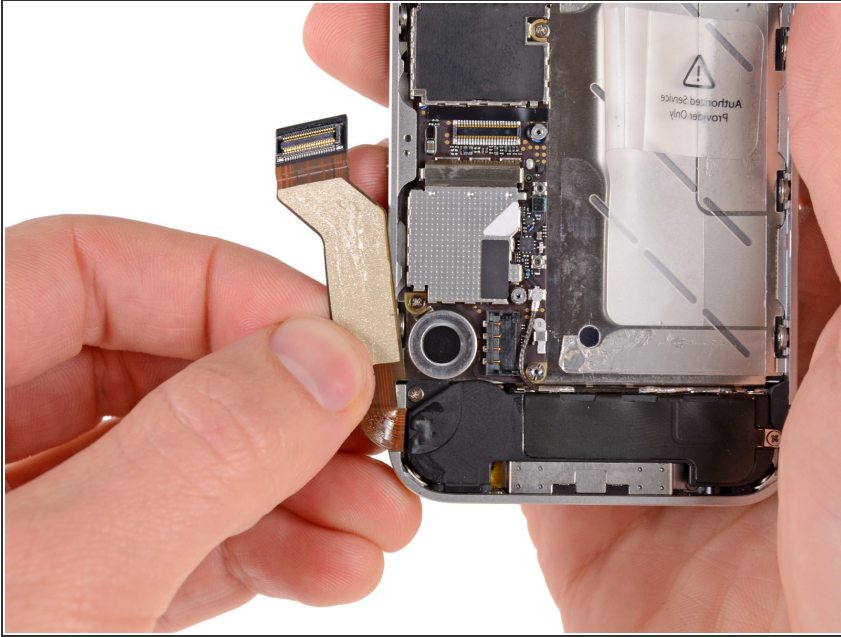

- Peel the dock connector cable off the adhesive securing it to the logic board and the side of the speaker enclosure.

Step 11



- Use the edge of a plastic opening tool to pry the cellular antenna cable up from its socket on the logic board.
- De-route the cellular antenna cable out from under the metal fingers attached to the logic board.

Step 12 — Rear Camera



- ⚠ Be wary of the outer plastic ring located on top of the rear camera's flash assembly. It can be easily displaced if not removed during disassembly.
- i You can use tweezers, a plastic opening tool, or a spudger to remove the outer plastic ring.

Step 13



- Remove the following four screws securing the cable cover to the logic board:
 - One 2.7 mm Phillips screw
 - One 2.6 mm Phillips screw
 - One 1.3 mm Phillips screw
 - One 1.2 mm Phillips screw

Step 14




- Use the edge of a plastic opening tool to pry the cable cover tabs out of their slots cut into the EMI shield on the logic board.
- Lift the cable cover from its edge nearest the top and remove it from the iPhone.

Step 15



- Use the edge of a plastic opening tool to pry the rear camera connector up from its socket on the logic board.
- ⚠ Be careful not to break any components off the surrounding area on the logic board as you pry upwards.
- Remove the rear camera from the iPhone.
- ☑ There is a small rubber gasket that sits underneath the rear-facing camera. Make sure that it is properly seated before reassembly.

Step 16 — SIM Card

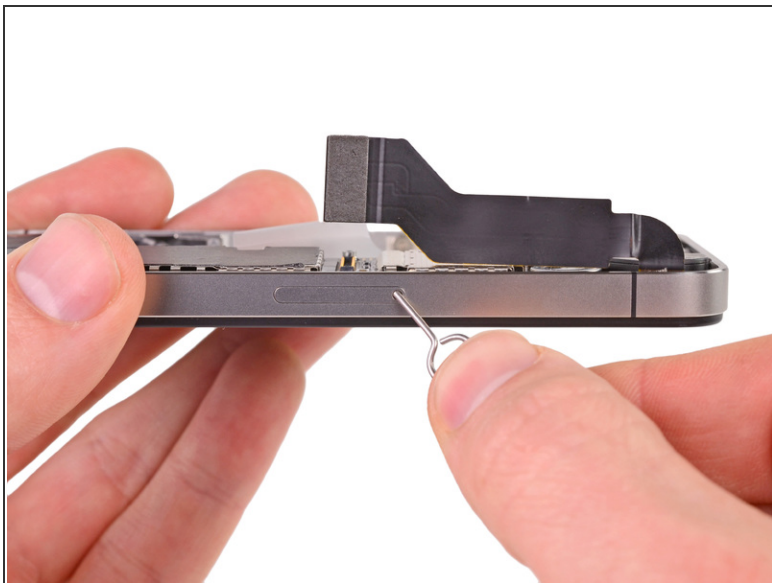

- Use a SIM card eject tool or a paperclip to eject the SIM card and its holder.

 This may require a significant amount of force.


- Remove the SIM card and its holder.

Step 17 — Logic Board




- Remove the five cables near the top of the logic board in the following order:
 - Headphone jack/volume button cable
 - Front facing camera cable
 - Digitizer cable
 - Display data cable
 - Power button cable (located underneath the headphone jack/volume button cable as shown in the second picture.)
- ⓘ To disconnect the cables, use the edge of a plastic opening tool to gently lift their connectors up and out of the sockets on the logic board.
- ⚠ Be careful not to break any of the small and delicate surface mount components as you disconnect the cables.

Step 18

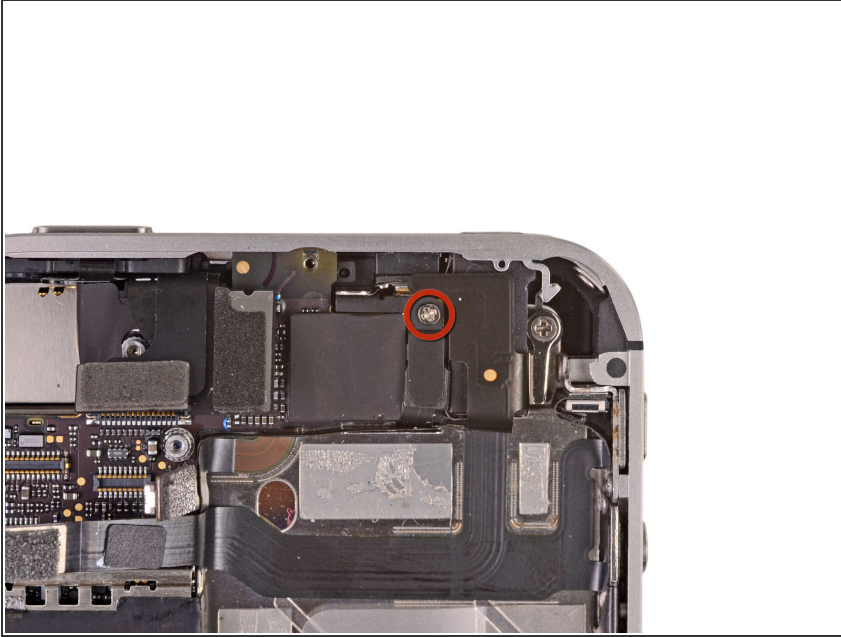


- Remove the 1.5 mm Phillips screw securing the grounding clip to the logic board near the headphone jack.

Step 19

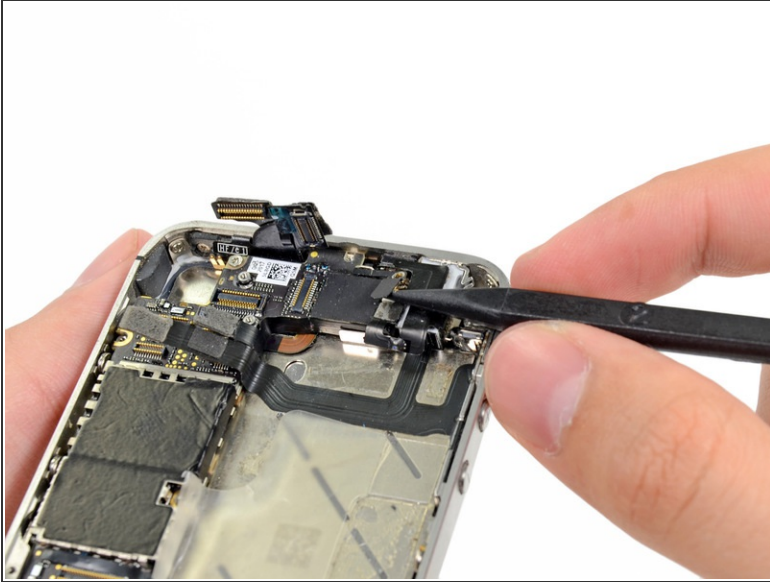

- Use the tip of a spudger to pry the small grounding clip up off the logic board.
- Carefully grasp the grounding clip and remove it from the iPhone.

 Before reassembly, be sure to clean all metal-to-metal contact points on the grounding clip (**not** the mating halves of connectors) with a de-greaser such as windex or isopropyl alcohol. The oils on your fingers have the potential to cause grounding issues.

Step 20




- Use a [standoff bit](#) or a small flathead screwdriver to remove the 4.8 mm standoff near the headphone jack.

Step 21



- Use the edge of a plastic opening tool to disconnect the Wi-Fi antenna from the logic board.

Step 22

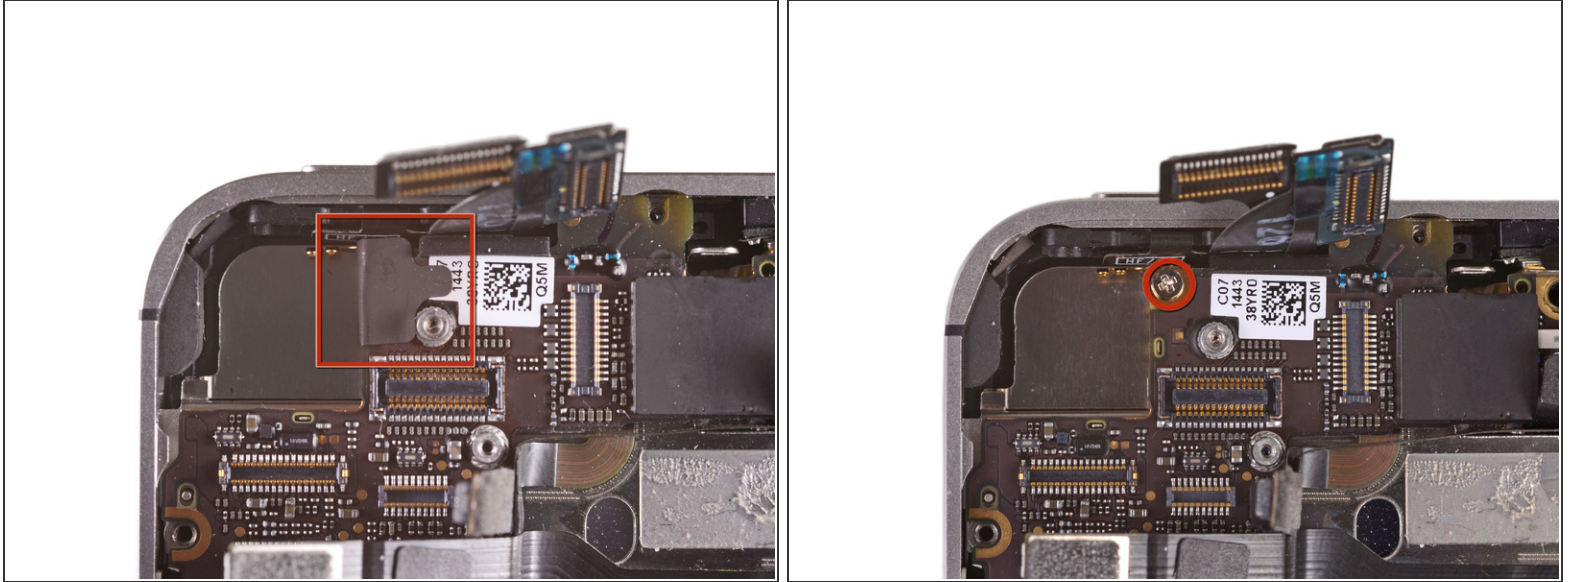

- If present, peel the piece of black tape covering the hidden screw near the power button.
- Remove the 2.6 mm Phillips screw securing the logic board near the power button.
 - ⚠ (Use caution when removing this screw and removing the power contact held by it; the contact tab will come loose with the screw)
- ⓘ Notice the small rubber bumper under the screen & digitizer cables (which are detached at top above the Q-code). This bumper can fall off of the logic board when removed or get stuck to the cables and fall off later.

Step 23





- Remove the following screws securing the logic board to the case:
 - One 2.5 mm Phillips screw near the vibrator motor
 - One 2.4 mm Phillips screw
 - One 3.6 mm standoff along the side of the logic board nearest the battery opening.
- ⓘ Use a [standoff driver bit](#) or a small flathead screwdriver to remove the single 3.6 mm standoff screw.

Step 24




- Carefully lift the logic board from the end closest to the speaker enclosure and slide it away from the top edge of the iPhone.
- Remove the logic board.

 Before reassembly, be sure to clean all metal-to-metal contact points on the logic board (**not** the mating halves of connectors) with a degreaser such as windex or isopropyl alcohol. The oils on your fingers have the potential to cause grounding issues.


 There is a small rubber bumper that sits on the top edge of the logic board where the digitizer and screen cables come through the case. It protects the cables as they bend over the top of the logic board. This can either get stuck to the cables or fall off the logic board when it comes out. Look back over step 22 for more details.

Step 25

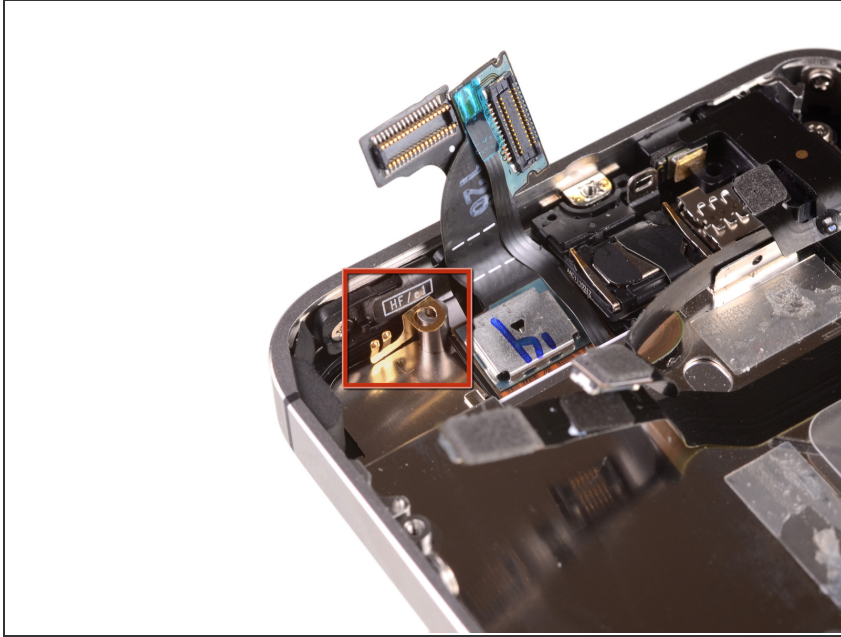

⚠ Be sure not to lose the small grounding finger for the rear facing camera near the power button. This finger rests on top of the PCB, screwed down, and covered with the adhesive black plastic tape.

Step 26 — Front Facing Camera

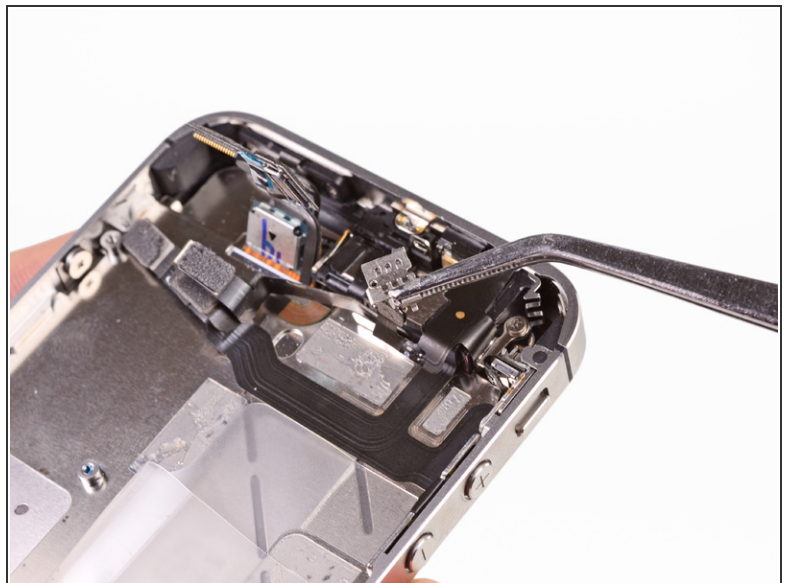


- Use the edge of a plastic opening tool to carefully pry the metal front facing camera retainer away from the case of your iPhone.
- Remove the front facing camera retainer.

Step 27





- Remove the front facing camera.

Step 28 — Upper Antenna

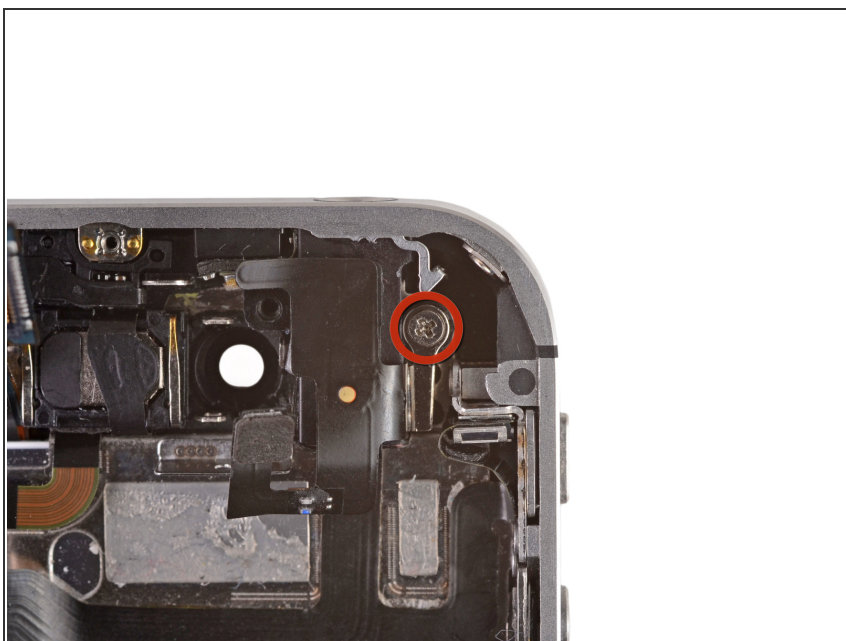


- Remove the 2.4 mm Phillips screw next to the headphone jack.

Step 29

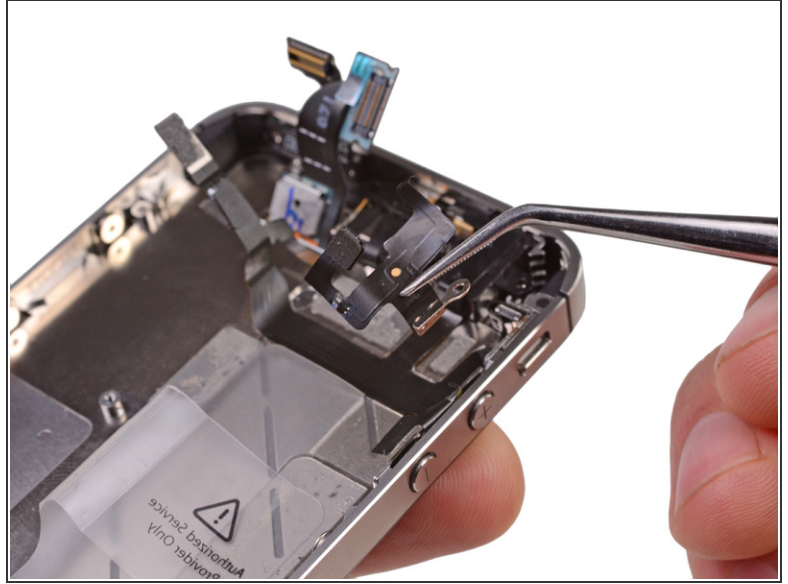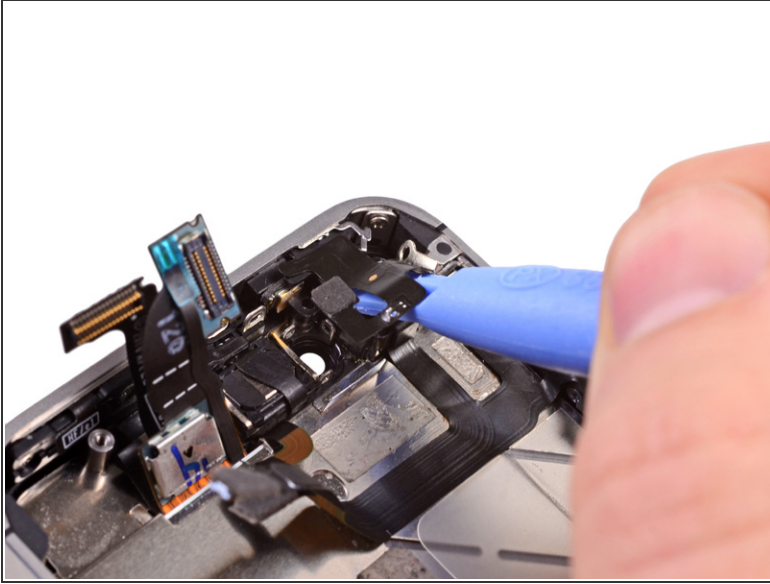


- Use the edge of a plastic opening tool to peel the upper antenna off the headphone jack.
- Use a pair of tweezers to remove the upper antenna from the iPhone.

 Before reassembly, be sure to clean the metal-to-metal contact point on the upper antenna (**not** the mating halves of its connector) with a de-greaser such as windex or isopropyl alcohol. The oils on your fingers have the potential to cause wireless interference issues.

Step 30 — Headphone Jack Cable Assembly



 In this step, be careful not to remove the headphone jack without first separating the top microphone from the upper case, as they are connected by a fragile flex cable.


- Use a plastic opening tool to start to pry the headphone jack out of its recess in the rear case.
- Then use the opening tool to gently peel the microphone up from the adhesive securing it to the top of the rear case.
- Remove the headphone jack assembly from the rear case, being careful not to tear the microphone flex cable.

Step 31




- Remove the 1.6 mm Phillips screw securing the mute switch bracket to the outer case.

Step 32

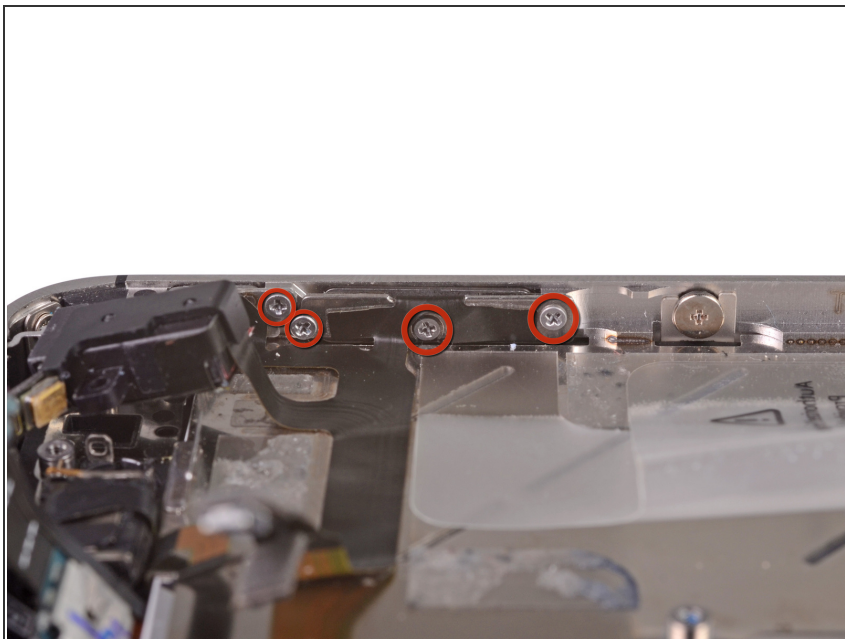


- Remove the four 1.5 mm Phillips screws securing the volume button and silent switch brackets to the outer case.

Step 33

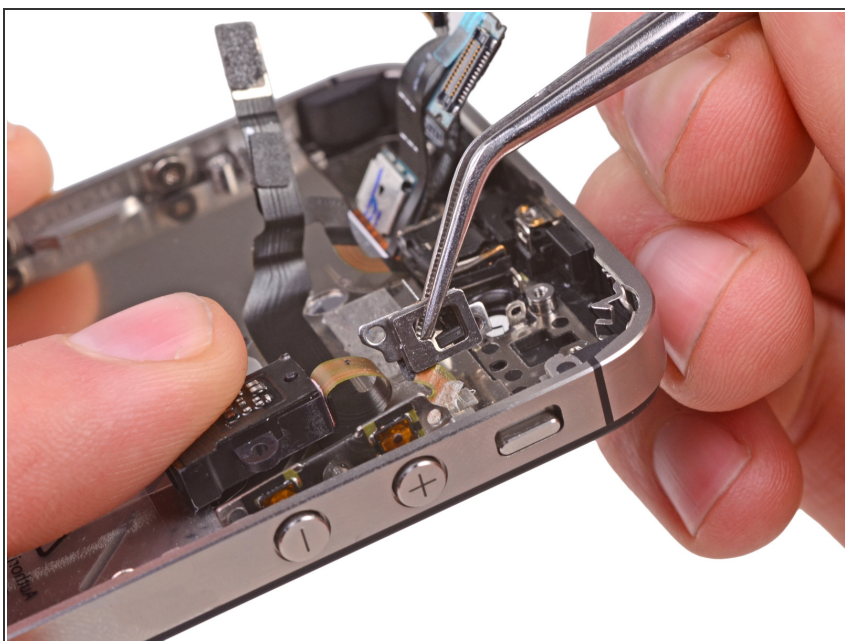




- Use a pair of tweezers to gently pull the silent switch bracket away from the outer case.


Step 34

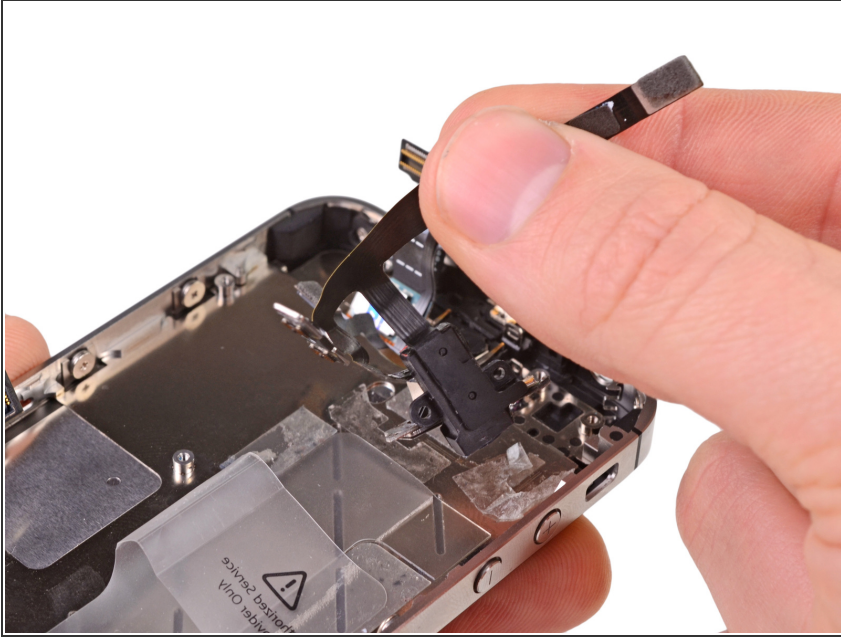


- Carefully peel the headphone jack/volume button cables off the adhesive securing them to the rear case.
- Remove the headphone jack cable assembly from the iPhone.

Step 35 — Headphone Jack Cable

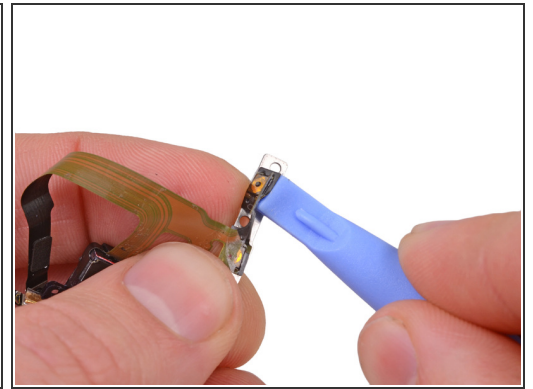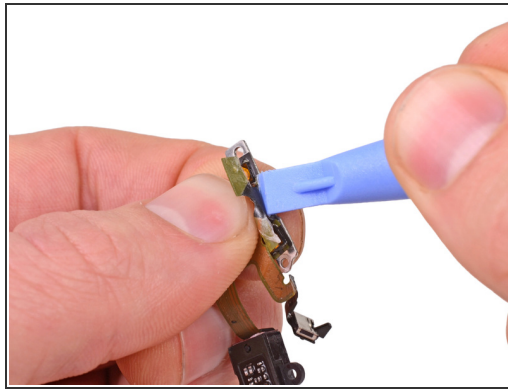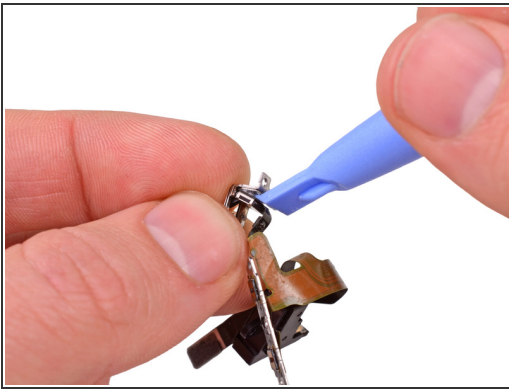

 If you are replacing the headphone jack cable, use the edge of a plastic opening tool to remove the steel brackets for the volume buttons and the silent switch.

 Transfer these steel brackets to the new headphone jack cable.

Step 36



- Headphone jack cable remains.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 10:41:01 AM.